




Moon Pillar

Installation

Components	Assembly	Completed Set Up
		
<p>Included are:</p> <ul style="list-style-type: none"> • 2 vertical sides • Square base • Cylinder top • 4 spring pins for base • 1 can gel fuel 	<p>To assemble:</p> <ol style="list-style-type: none"> 1. Slide side with bottom slit over top slit side 2. Lay sides down, attach base 3. Lock with spring pins 4. Stand unit up and place cylinder on top 5. Insert gel fuel can inside cylinder 	<p>To install:</p> <p>Place pillar in desired position. May be secured through the center hole in the base with a lag bolt (if necessary).</p>

Use and Care

<p>Directions for use:</p> <ul style="list-style-type: none"> • READ ALL DIRECTIONS on can, tear off the label, and shake can well before using (13 oz. fuel in 16 oz. can) • Each can burns 2-3 hours with a beautiful 4-7" vibrant yellow flame and a wonderful crackling sound effect • Only re-use cans for 3-4 fires, then replace with fresh new clean pint cans (found in hardware stores) 	<p>To refill:</p> <ol style="list-style-type: none"> 1. Store refill bottle in cool, dark area 2. READ ALL DIRECTIONS before refilling 3. Shake refill bottle before using 4. Pour with caution - if spilled, clean with water and do not light near spillage 5. Replace child lock safety cap each time bottle is opened
<p>Corten Steel – a.k.a. weathering steel, a special alloy that uses copper and nickel to create a weather-resistant surface. Can be left untreated and is maintenance free.</p>	<p>Gel fuel - alcohol based, with water, salt and thickening agents, lasts for 2 years, NOT explosive</p>